 


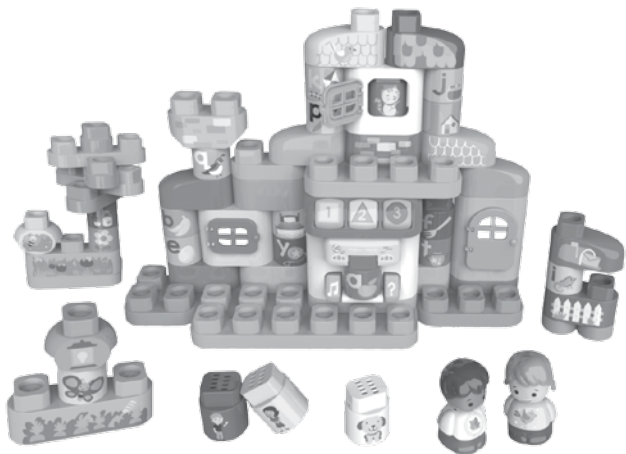

Phonics House



Parent's Guide

This guide contains important information. Please keep it for future reference.

INTRODUCTION

Thank you for purchasing the **Leapfrog® LeapBuilders Phonics House** play set.

The **Leapfrog® LeapBuilders Phonics House** play set is an interactive house building set that comes with a main unit, 35 house blocks and twenty double sided recognisable blocks. Insert the recognisable blocks into the Interactive Smart Star™ Unit to learn about letters, phonics, objects, greetings and animals. Inspire open-ended creativity and stacking fun with all the blocks.

 
OFF / Low /
High Volume
Control Switch



Three number
buttons



Interactive
Smart Star™
Unit

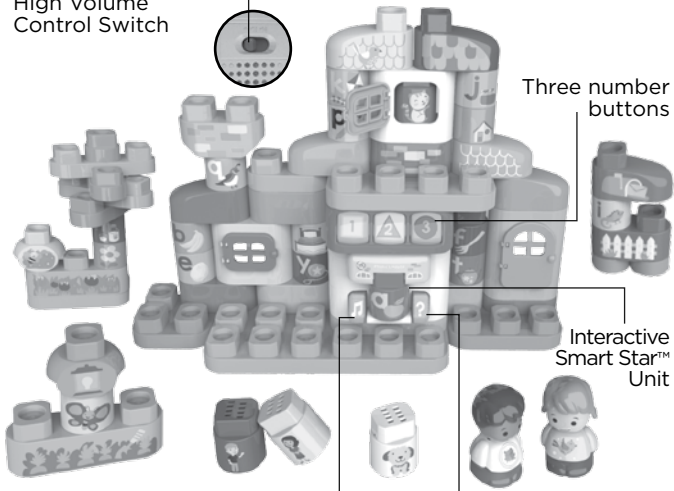


Music Light
Button



Question Light
Button


INCLUDED IN THIS PACKAGE

 - One Leapfrog® LeapBuilders Phonics House play set
- One main unit
- 35 house blocks

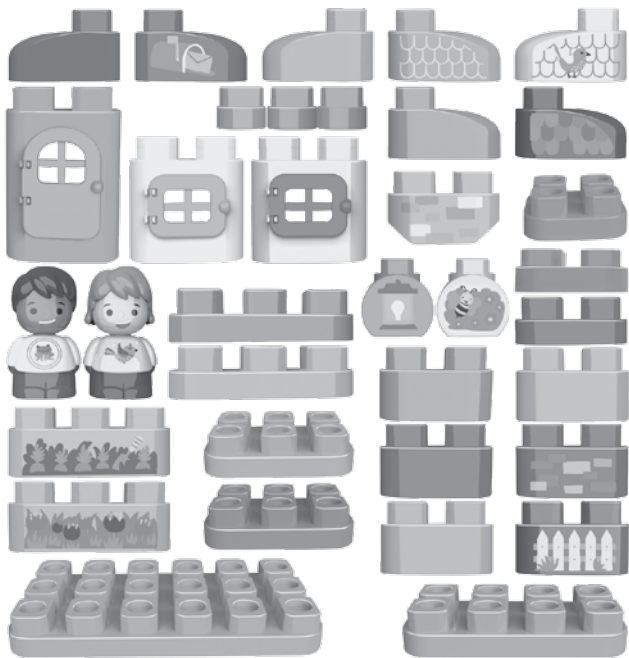

- 20 double sided recognisable blocks

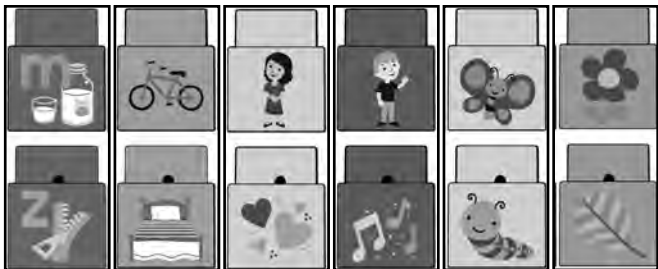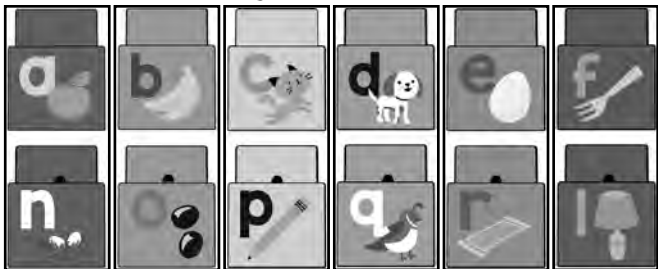  

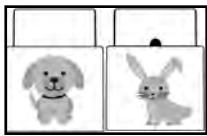 

- One parent's guide
- One assembling guide

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cord and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
NOTE:

Please keep this parent's guide as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AAA' batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

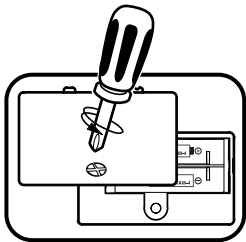

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF/VOLUME CONTROL SWITCH

To turn the unit **ON**, slide the **OFF / Low / High Volume control switch** to the **Low** (🔊) or **High Volume** (🔊🔊) position. To turn the unit **OFF**, slide the **OFF / Low / High Volume control switch** to the **OFF** (🔇) position.

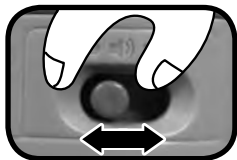



2. Automatic Shut Off

To preserve battery life, the **Leapfrog® LeapBuilders Phonics House play set** will automatically shut off after approximately 90 seconds without input. The unit can be turned on again by pressing any button or by inserting a block into the Interactive Smart Star™ Unit. The Trigger buzzer will not turn the unit back on.

NOTE: This product is in try-me mode in the packaging. After opening the package, turn the product off and on again to proceed with normal play. If the unit powers down while playing, we suggest installing a new set of batteries.

ACTIVITIES

  1. Slide the **OFF/Low/High Volume control switch** to turn the unit on. You will hear an opening sound effect, a playful phrase and a welcome song. The lights will flash with the sounds.
2. Press the **Number Buttons** to hear numbers and shapes. The lights will flash with the sounds.
3. Press the **Music Button** to hear interesting songs about building houses and short tunes. The lights will flash with the sounds.

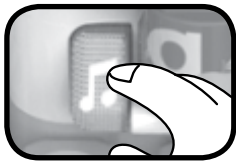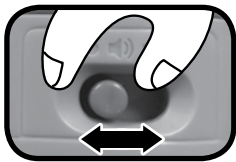


4. Press the **Question Button** to hear hear playful phrases and short tunes. The lights will flash with the sounds



5. Insert the **double sided recognisable blocks** into the Interactive Smart Star™ Unit to learn about letters, phonics and objects. The lights will flash with the sounds.



 6. Stack the blocks onto the main unit to hear fun sound effects and phrases and short tunes.

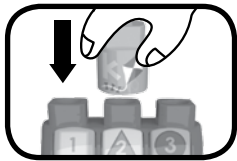

7. For added fun, the **LeapBuilders Phonics House play set** interacts with the blocks from other LeapBuilder play sets. Simply put a block from another LeapBuilder play set into the Interactive Smart Star™ on the Phonics House play set to see flashing lights and hear learning phrases and short tunes. (play set's sold separately).

SING-ALONG SONG LYRICS

SONG 1

Welcome home,
Come on in let's play.
What do you want to build today?

SONG 2

At my house,
Let's make believe, a Frog's outside eating ice cream,
With a Monkey in the kitchen, a Kitten in the tree.
At my house, let's pretend, that an Octopus might fly a kite.
A teddy bear 's making honey with the bees.
At my house.

SONG 3

Grab a block, gonna build our house much taller,
Fill it in, where to begin, and which colour?
All our friends are welcome here.
Everyone, come and add a block to help us,
Build our house.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit will now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please call our Consumer Services Department at 0330 678 0149 (from UK) and +44 330 678 0149 (outside UK), and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing Infant Learning products is accompanied by a responsibility that we at Leapfrog take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 0330 678 0149 (from UK) and +44 330 678 0149 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.co.uk

***Read our complete warranty policy online at
leapfrog.co.uk/warranty***

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
TM & © 2018 LeapFrog Enterprises, Inc.

All rights reserved.
91-003560-000 